









## Contents

1 x Pump with Mains Plug 1 x Accordion Hose 1 x Inflate/Deflate Nozzle 1 x Top Up Nozzle

## Inflation

- **1.** Connect the Inflate/Deflate nozzle to the small end of the hose.
- 2. Connect the large end of the hose to the inflation port on the pump.
- 3. Plug the pump into a mains power supply.
- 4. Attach the nozzle to the valve of the inflatable product.
- **5.** Turn on the pump's power switch to begin inflation. Never leave the pump unattended while in use.
- 6. After inflation, turn off the switch and disconnect the power supply.

## Тор Uр

- 1. Connect the Top Up nozzle to the small end of the hose.
- 2. Connect the large end of the hose to the inflation port on the pump.
- 3. Plug the pump into a mains power supply.
- 4. Hold the nozzle to the valve of the inflatable product.
- 5. Turn on the pump's power switch to begin inflation. Never leave the pump unattended while in use.
- 6. After inflation, turn off the switch and disconnect the power supply.

## Deflation

**DEFLATION PORT** 

- 1. Connect the Inflate/Deflate nozzle to the small end of the hose.
- 2. Connect the large end of the hose to the deflation port on the pump.
- 3. Plug the pump into a mains power supply.
- 4. Attach the nozzle to the valve of the inflatable product.
- **5.** Turn on the pump's power switch to begin deflation. Never leave the pump unattended while in use.
- 6. After deflation, turn off the switch and disconnect the power supply.

